

CTI CRYOGENICS® ON-BOARD® *IS*-1000 AND *IS*-2000V COMPRESSORS

edwardsvacuum.com

The On-Board® *IS*-1000 and *IS*-2000V compressors support new and existing On-Board® *IS* Cryopump applications. They leverage proven On-Board® *IS* technology: intelligent system controls, cryopump solution integration, robust electronics and software. Like the rest of our range, they enable multiple pump configurations with the most efficient and costeffective helium management solution.

The On-Board® *IS*-1000 and *IS*-2000V Compressors meet process engineers' demands for improved performance, greater energy efficiency, lower energy costs and design flexibility. Both compressors support multiple On-Board® *IS* cryopumps (up to five cryopumps for one *IS*-1000 and up to ten cryopumps for one *IS*-2000V), enabling their high vacuum performances by providing optimal helium management. *IS*-1000 is the standard compressor for multiple On-Board® *IS* cryopumps system for a lower price while *IS*-2000V is the premium compressor that, on top of all the *IS*-1000 advantages, provides the highest energy efficiency in the industry hence lowering the cost of ownership.

Edwards provides the answer to industry demands for greater efficiency and sustainable operations 1 . IS-2000V reduces energy consumption by more than 20% and the thermal load on facility cooling water by 40% compared to IS-1000.

IS-2000V features design refinements resulting in adaptable helium output and fault-tolerant operation. Variable speed operation enables dramatic power savings while the compressor runs at more efficient and higher pressures to optimise the helium output.

¹/S-2000V aligns with the energy reduction objectives associated with SEMI Standard S23 (Guide for Conservation of Energy, Utilities and Materials Used by Semiconductor Manufacturing Equipment), and is compliant with the RoHS (Restriction of Hazardous Substances) directive.



Features and benefits

IS-1000 and IS-2000V Advantages:

- High Efficiency, Intelligent Compressors
 - Higher pressures deliver more Helium per kW input power
 - Embedded sensors provide new diagnostic capabilities

IS-2000V Offers Even Lower Cost of Ownership:

- Highest energy efficiency variable speed increases cooling capacity and reduces energy costs by at least 20%
- Single compressor solution one IS-2000V will support up to 10 cryopumps
- Smaller footprint
- Lower thermal load cooling water load is reduced by approximately 40%
- Fault-tolerant operation designed to minimise operational downtime and send alerts

On-Board® IS Benefits

- Proven reliability and operational life
- Increased tool availability for higher productivity
- Intelligent cryopumping solution to maximise pump efficiency
- Optimal helium management and power savings
- Global rapid response teams

PRODUCT DATA SHEET edwardsvacuum.com


On-Board® IS-1000 and IS-2000V Compressor Installation Specs

	⁽²⁾ /S-1000s		⁽¹⁾ IS-2000V	
	Low Voltage	High Voltage	Low Voltage	High Voltage
Electrical Supply	3 Phase	3 Phase	3 Phase	3 Phase
	200/230 V	380/480 V	200/230 V	380/480 V
	50/60 Hz	50/60 Hz	50/60 Hz	50/60 Hz
Electrical Service	(2) Circuit Breakers		Single Circuit Breaker	
Rated Full Load	2 x 19 Amp	2 x 10 Amp	41 Amp	25 Amp
Locked Rotor Current	2 x 85 Amp	2 x 42 Amp	170 Amp	85 Amp
Input Circuit Breaker	2 x 25 Amp	2 x 15 Amp	60 Amp	35 Amp
Cooling Water (Inlet) ¹	3.0 to 8.0 GPM		3.0 to 4.0 GPM	
	10° to 32°C (50° to 90°F)		10° to 32°C (50° to 90°F)	
Ambient Temperature	10° to 38°C (50° to 100°F)		10° to 38°C (50° to 100°F)	
Dimensions (W x D x H) ²	1,036 x 577 x 665 mm		518 x 686 x 1481 mm	
	(40.8 x 22.7 x 26.2 in)		(20.4 x 27.0 x 58.3 in)	
Weight ¹	190 kg	204 kg	250 kg	261 kg
	(420 lbs)	(444 lbs)	(550 lbs)	(575 lbs)

¹Cooling Water and weight are for (2) IS-1000 compressors

30% Power Savings Over IS-1000

Demonstrated Energy Reduction by Large End-user. On-Board® *IS*-2000V Compressor Power Consumption.

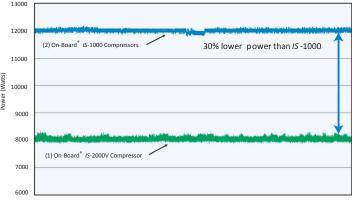

The IS-2000V offers 30% lower power consumption than the IS-1000.

Edwards continually updates its products to match the evolving needs of the semiconductor industry and any specifications given here are subject to change without notice.

GLOBAL CONTACTS $\ensuremath{\mathbb{O}}$ Edwards Limited 2021. All rights reserved Edwards and the Edwards logo are trademarks of Edwards **EMEA** ASIA PACIFIC +44 (0) 1444 253 000 China +86 400 111 9618 Limited. (local rate) 0845 921 2223 India +91 20 4075 2222 Whilst we make every effort to ensure that we Belgium +32 2 300 0730 +81 47 458 8836 Japan accurately describe our products and services, we give +33 1 4121 1256 Korea +82 31 716 7070 no guarantee as to the accuracy or completeness of any 0800 000 1456 +65 6546 8408 Germany Singapore + 39 02 48 4471 Taiwan +886 3758 1000 Italy Edwards Ltd, registered in England and Wales + 972 8 681 0633 Israel No. 6124750, registered office: Innovation Drive, **AMERICAS** Burgess Hill, West Sussex, RH15 9TW, UK. USA +1 800 848 9800 Brazil +55 11 3952 5000



²Height dimension includes caster wheels (78mm / 3.1 inches for each IS-1000 and 138mm / 5.4 inches for the IS-2000V)